
Multimedia Home Entertainment Video Projector

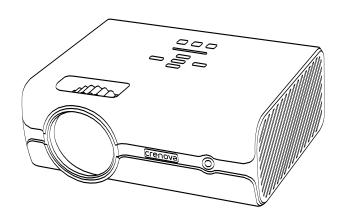



English Deutsch Français Español Italiano 日本語

To ensure safe and proper use, please read this instruction before operating the product.

Contents

English	 XXXXXX
Deutsch	 xxxxx
Français	 XXXXXX
Español	 xxxxx
Italiano	 xxxxxx
日本語	 xxxxxx

Important Safety Instructions



•Don't use chemical detergents to clean



•Don't look directly into the light



•Don't disassemble the projector



•Unplug the projector after shutdown



•Use a soft and dry cloth for cleaning



•Don't use the projector near water or moisture



•Don't block any ventilation openings




 Place the projector on a flat surface



•Use in a wellventilated area





Box Contents

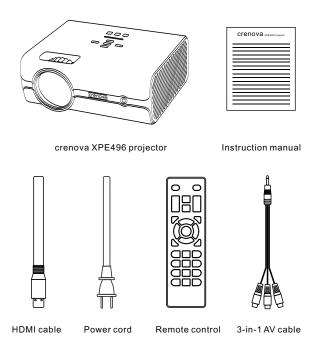


Note: Adjust the focus ring and the keystone ring before using the projector. Turn off this product when not in use to prolong the life of the projector.

 Product Parts

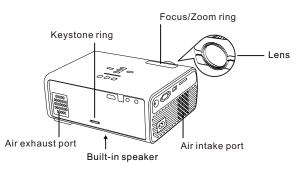

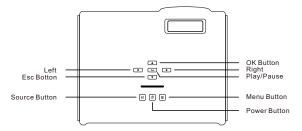




1.TV port


4.SD card slot

 7. Audio jack



2.VGA port 5.HDMI port 3.USB port 6.AV input port


Remote Control

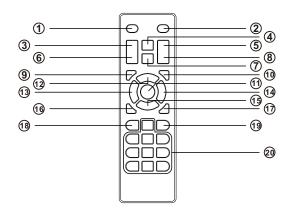


- 1. Power button (turns the projector on or off)
- 2. Mute button (turns off sound)
- 3. Volume up button (adjusts speaker volume)
- 4. Fast backward button (fast backwards)
 5. Fast forward button (fast forwards)
- 6. **Volume down button** (adjusts speaker volume)
- 7. Play/Pause button (plays/pauses the playing content)
- 8. **Stop button** (stops the playing content)
- 9. SOURCE button (selects the input source)
- 10. INFO button (operates the information function)
- 11. **ENTER button** (selects and confirms options)
- 12. Up (selects upward movement on the function interface of the menu)
- 13. **Down** (selects downward movement on the function interface of the menu)
- 14. Left (selects leftward movement on the function interface of the menu)
- 15. Right (selects rightward movement on the function interface of the menu)
- 16. MENU button (accesses projector menu system)
- 17. EXIT button (exits from the DTV channel)
- 18. **CH down button** (channel down) 19. **CH up button** (channel up)
- 20. Numeric buttons (enter numbers)


Projector Operations


1. Connect the power cord to the projector's power inlet, press the Power Button to turn on the projector.

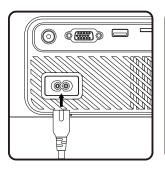

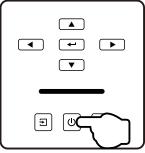


2. Rotate the Focus Ring and the Keystone Correction simultaneously until to get the clear image.

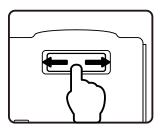

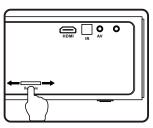


3. Press the Menu Button. Press Left/Right to select Option. Choose OSD Language under Option.

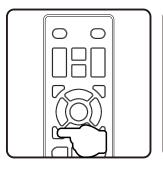




4. Press Ok to access the submenu of OSD Language and press UP/Down/Left/Right to select the language.

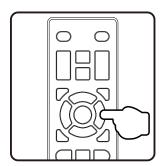





5. To connect a device, press the Input Button or the Source Button.

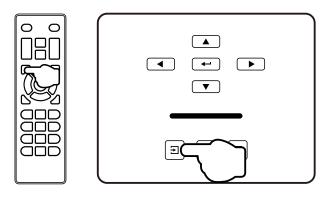

6. Select the correct input source and prepare the cable for device connections if necessary.

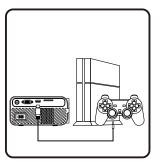

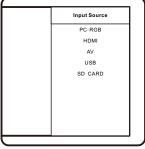

Flexible Connectivity

 
7. Connect the projector to your device with the compatible cable and port.

Note: Do not hot plug the device, power off the device before making any connections.







Connect to a HDMI device



 
Connect to a USB storage device up to 64G




Connect to a VGA device

 

Connect to an audio device

 

Connect to an AV equipment

 

Charge a mobile device

Enjoy now



Product Specifications


















Imaging Technology	TFT LCD	
Native Resolution	800x480 pixels	
Maximum Supported Resolution	1920x1080 pixels	
Light	LED	
Lens	Multichip Coated Lens(F=125)	
Keystone	± 15 ° Correction	
Screen Size	50-130 inches	
Projection Distance	1.5-4.0m	
Recommended Projection Distance	1.51-2.2m with screen size of 50-72 inches	
Projection Ratio	1.4:1	
Aspect Ratio	16:10	
Color	16.7k	
Consumption	50W(Max)	
Power Supply	100-240V(50/60 Hz)-20V/2A	
Supported Audio Formats	MP3/WMA/OGG/AAC/FLAC/APE/WAV	
Supported Image Formats	PEG/BMP/PNG	
Supported File Format	TXT	

 Projection Distance and Screen Size





Warranty



Your projector comes with a free replacement or a full refund within 1 year that lets your product with confidence.

Helpful Tips



- •Please operate the projector in a dark room.
- •The cooling system makes slight noise to avoid overheating.
- •Connecting to an external audio device is recommended.
- •Business data presentation is not recommended.
- •Maximum supported resolution of the projector is 1920x1080 pixels.
- •Native resolution of the projector is 800x480 pixels.
- •The projector does not support Dolby Vision.
- •Mirror a smartphone to the projector with a HDMI/WiFi dongle.

Contact Us



Whether you need further assistance, are looking for answers, or just want to share your reviews with us, you will find many ways to contact us right here.

Email: service@crenova.net

Contact No.: 1-562-999-4260

Official Homepage: www.crenova.net

Or you may scan the code and visit our Facebook below:

https://www.facebook.com/icrenova/